Unity Control Circuit Board As of 2-18-16

First To Know was sent out on July 30th 2015

FIRST TO KNOW

Date: July 30, 2015

Models or Product Affected: Cruisair & Marine Air Systems

Recipients: Dealers, Master Dealers, Distributors, OEMs, Manufacturer's Reps

New U-Control Circuit Board For Cruisair and Marine Air Systems

New "U" version hardware has been released to replace the circuit boards on the Cruisair Q-Logic and Marine Air Passport I/O controls for Turbo self-contained systems, Emerald split systems, and the tempered water/chilled water product lines.


Changes For Cruisair

- The new U board began shipping from the factory during the second half of June 2015 starting with serial number 525xxxxx for Turbos and 526xxxxx for Emeralds. The rest of the Q and SMXII families will follow later this summer.
- Dometic has inventory of Q boards to cover end of life. At this time it is recommended to replace
 existing Q boards with a Q board. At a future time when Q boards are no longer available for
 replacement, the electrical box and harness will also need to be changed and Dometic will release
 retrofit electric box kits to replace Q boards.
- NOTE: Wire colors have changed!
- The U board is compatible with these Cruisair displays:
 - Q Logic Qht, Q3
 - SMXII SMXHT, SMXir, SMXIIAB
- The new U board is not compatible with the existing CAN Bus adapter (4250042) used in the following kits:
 - 763100027
 - 763100061
- U board with the CAN Bus daughter board will be available later this summer.

· Changes For Marine Air

- The new U board began shipping from the factory in early July 2015 starting with serial number 528xxxxx for Turbos, Emeralds, and chilled water systems.
- The U board is a mechanical drop-in replacement (same footprint), however the wiring and terminal-block layout do change. Order part number 223100502, which consists of the replacement U board for DX systems, generic wiring diagram, and terminal strip label. The U board is compatible with these Marine Air displays and firmware versions:
 - Elite Firmware releases A13 and later.
 - Passport I/O Firmware releases A12 and later.

U Control Circuit Board

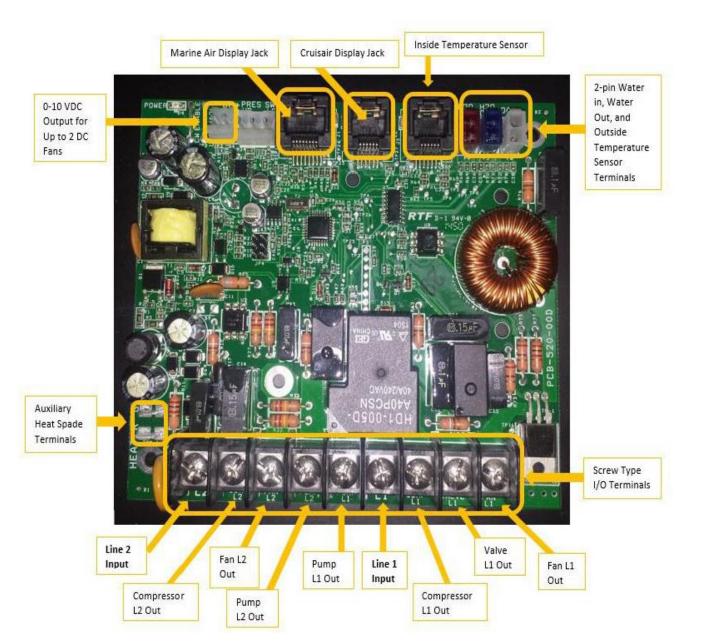

- All equipment built with this board will have the letter "U" in the description after the BTU, (ex: STQ12U-410A, VTD12UK-410A).
- All Dometic brand units will have the letter "U" in the model #, (ex: DTU,DEU)
- Works with Passport I/O, Firmware A12 and later, Elite, Firmware A13 and later
- Works with all SMXII, SMXHT, Q-3, or QHT displays
- Only works with SMXIR displays made from 2005 to present
- Starting dates for Marine Air units, July 2015, serial # 528xxxxx for all Turbos, Emerald, & CW
- Starting date for Q-logic units, June 2015, serial # 525xxxxx for Turbos and 526xxxxx for Emerald units
- Starting date for SMXII units, October 2015, serial # 541xxxxxx
- Will not fit the same footprint of an A-288D SMXII board or a 701800004 Q-logic board. Will have about 3 years before end of life for these old boards.
- Wire color code has changed with all **Cruisair units** to Marine Air using the unity board. Also all the new Dometic brand units will have the standard Marine Air colors.
 - Compressor common wire, Purple to Black
 - Compressor start wire, Pink to Orange
 - Compressor run wire, White/red to White
 - Fan wire, Orange to Red
 - Reversing valve Blue to Yellow
 - ➤ High pressure switch wires, Yellow to Black & Orange
 - ➤ Low pressure switch wires, White to Black & Blue

U Control Circuit Board



U-Board With SMXIR, SMXHT or SMXII Keypads

Another change that was made with the u-board is the SMXII, SMXIRB or SMXHT keypad will now show HP/-- or LP/-- on start up if we have an open pressure switch. This could be from a bad switch, loose connection or a unit that is out of refrigerant.

This enhancement was carried over from the Q-logic keypads.

Also another enhancement is that the keypad will show a 3 minute count down starting at 90 and count down to zero when the unit has cycled on the Hi pressure switch.

For the SMXII and SMXIR, right now it only shows the fault codes or count down when the keypad is showing the inside temperature and not the set point. If you are looking at the set point temperature it will just kick the unit out of the mode and back in the off mode. This small glitch has been fixed in revision V3R28 that will be coming out soon.



Replacement Board And Adaptors for U Control Circuit Board


Replacement Board part numbers:

223100502 DX or CW U Board (No cable adapters)

223100500 DX U Board retro for Passport I/O. Comes with 3 cable adapters and coupler for air and water sensors.

223100503 DX U Board with Canbus daughter board.

263400602 CW U board retro for Passport I/O. Comes with 2 cable adapters and couplers for water sensors.

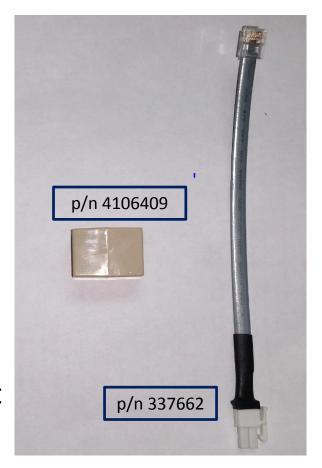


Kit Number 222103190 ADAPT SENSOR U-CNTRL WTR/OAS Adapters are necessary for retrofits or optional sensors. New units will arrived with new sensors






U Control Circuit Board Revision D

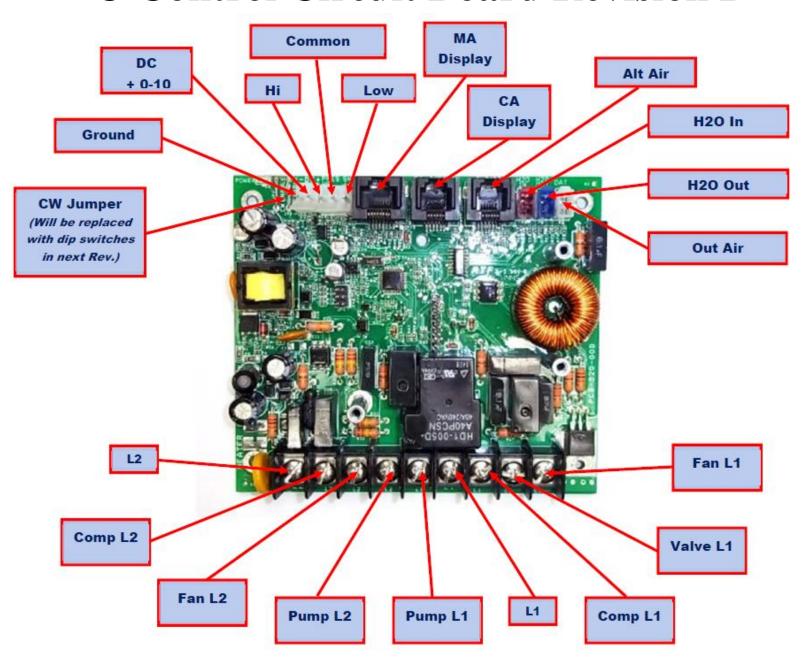

Passport I/O and U Control Comparison

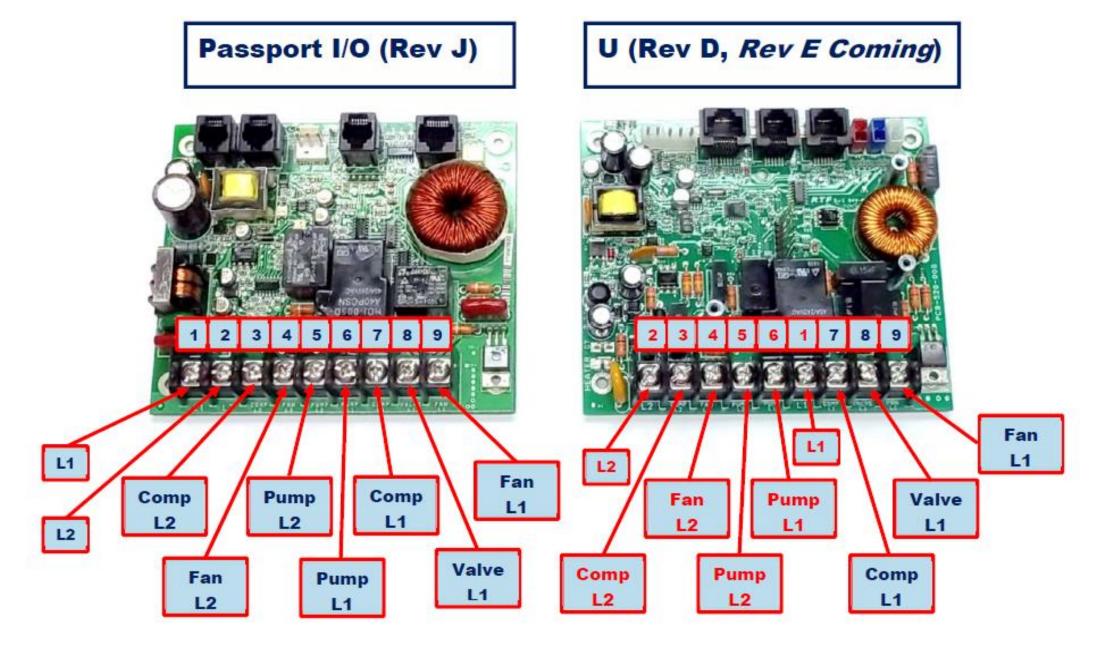

Passport I/O and U Control Comparison

Passport I/O (Rev J) U (Rev D, Rev E Coming) DC + Common **MA Display** Service 0-10 Common **Jumper** Outside H₂O **CA Display** Ground Air Low Low Alt Air MA Display **H20 In** Alt Air H20 Out **Out Air**

Passport I/O Circuit Board for use with AC blowers

Out of Production!




Older Revision - 335424

Newer Revision - 4220020

2 Jumpers

One for CW
One for LP switch

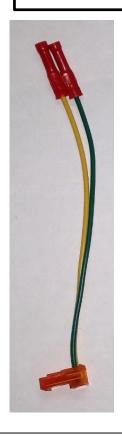

Optional DC adaptor required for DC blower operation for Rev D board p/n: 337788

U Control Circuit Board Revision D First Version Released Out In The field



Air temp sensors

- It depends on the display that is plugged in.
- Sensors are still optional for Marine Air.
- If you use a Marine Air display you have to use a MA 6 pin 10K ohm temp sensor.
- If you use a Cruisair display you have to use a CA 4 pin 3K ohm temp sensor.

U Control Circuit Board Rev E These will be used with the Dometic Brand Units DTU, DEU, ECT.

JP5 jumper for MAS sensors

Screw on connector for DC connections, so adapter will no longer be needed.



Air temp sensors

- Sensors are still optional for Marine Air.
- A Marine Air display will work with a CA 4 pin 3K ohm sensor with JP5 jumper un-cut.
- If you use a MA 6 pin 10K ohm temp sensor, the JP5 jumper has to be cut.
- If you use a Cruisair display you have to use a CA 4 pin 3K ohm temp sensor, and leave the JP5 jumper un-cut.

p/n 337788
DC adaptor for DC
blower operation will
no longer be needed
with Rev E U-Boards

Easy Way To Identify the Different Revision U Control Circuit Board

Board has 2 jumpers

2 pin plug for DC connections.



U Board Rev D

Board has
3 jumpers

Screw on connector for DC connections.




U Board Rev E

Notable changes:
Jumpers will be replaced by Bimini jumpers.

U Control Circuit Board, Next Revision...


This will possibly be availably in the Summer of 2016

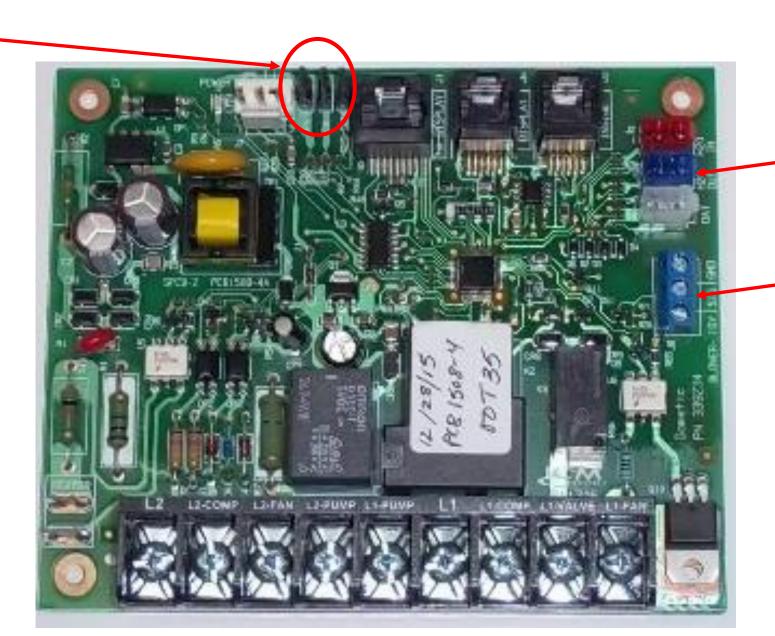

3 sockets & DC connections will be relocated

DC conections will be a 3 wire connection

U Control Circuit Board Wiring Diagram For CW or DX

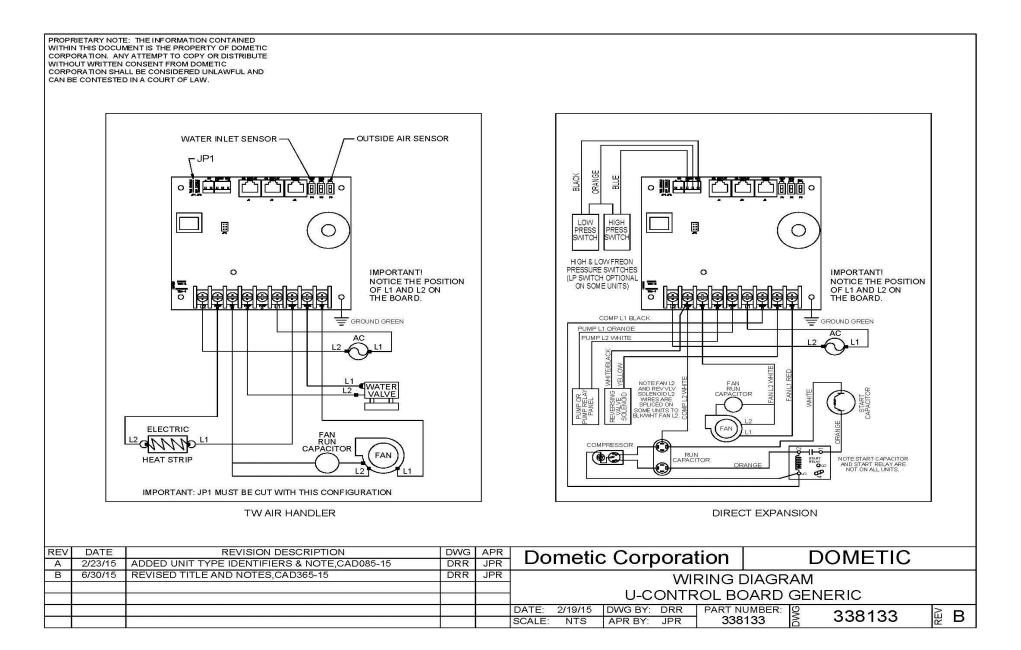

U Control Circuit Board CanBus & DC

