

HOW TO PROGRAM THE DOORBELL OR INTERCOM

The Chamberlain Wireless Indoor/Outdoor Intercoms and Wireless Front Doorbell have a range of 1000 feet and are capable of programming up to 12 devices on the same network. These Intercoms and Doorbells form a secure network on a 900Mhz frequency and will respond only to other devices programmed into the network.

A. To clear a device from the network and start over

1. Locate the Learn Button (Learn Buttons for the Doorbell and outdoor Intercom are inside the device, and the Learn Button for the Indoor Intercom is located on the back of the device).
2. Press and hold the Learn Button, an initial beep will be heard. Continue to hold the Learn Button until a second beep is heard (about 6 seconds).

B. To create a new network (first-time programming):

1. Clear all devices before programming.
2. Press the Learn Button on the indoor base station intercom first, until a beep is heard. Within 10 seconds, press the program button on the doorbell intercom, until a beep is heard.

Note: Each device will emit a tone when entering Programming Mode. It may take up to 3-1/2 minutes for a secure network to be established.

C. To program a Doorbell or Intercom into an existing network:

NOTE: Do NOT program new Doorbell/Intercoms to each other before adding them to an existing network or they will form a separate network and the devices' memories will have to be cleared.

1. Press the learn button on the new doorbell or intercom until a beep is heard.
2. Within 10 seconds, press the learn button on any networked doorbell or intercom until a beep is heard.

Each device will emit a tone when entering Programming Mode. It may take up to 3-1/2 minutes for a secure network to be established. If programming is unsuccessful, clear the memory on the device you are trying to add and repeat the three steps above.