

8. On-Line Commands

Irrespective of whether the panel is Ademco, FBII, or Apex, many on-line commands are common across them. All the commands may not be valid for all the panels.

These commands are common for the Interactive mode and the Unattended mode. The only difference is that in the Unattended mode the screens asking for user input during command execution are not displayed.

Instead, the Command Details screen is displayed during the scheduling.




REFERENCE- INTERNAL


For more information on Command Details, refer to [Single Window for Configuring Multiple Commands](#).

8.1 Selecting a Command

You can select and de-select commands using the following buttons:

Button	Click this to...
	Move commands to the Selected Commands list.  TIP: You can also select a command by double-clicking the command, or using the drag-and-drop method described in section 1.4 of this user guide.
	Move commands from the Selected Commands to the Commands list.
	Move all commands from the Selected Commands to the Commands list.

Other Tools

Tool	Use this to...
	Stop the execution, and cancel the command. This is enabled when the selected commands are being processed. It is placed below the Selected Commands list. This is not available in the Unattended mode.  ATTENTION: This button is disabled for some lower end panels.



Remove the completed or failed tasks from the Selected Commands list.

It is placed below the Selected Commands list. This is not available in Unattended mode.



Deselect all the highlighted commands at once.

It is placed below the Commands list.



Edit a selected command.

It is placed to the right of the Selected Commands list.



ATTENTION: This tool is enabled only when the user input is taken for a command as in Arm/Disarm or Timeset. It is disabled for other commands.



Move the selected commands up or down to prioritize a task.

It is placed to the right of the Selected Commands list.

8.2 List of Commands

A comprehensive list of commands and their description is provided in the following table:

Command	Description
Arm	Arm the panel from the downloader. You have to specify the area, when prompted
ChangePhone	Change the download phone number
Clear Relays	Clear relay information
Clear Tamper	Clear tamper information
Clear Zone Lockouts	Clear zone lockouts information
CsidChange	Change the Central Station ID
DialerOff	Switch-off dialer from the monitoring station
DialerOn	Switch-on dialer from the monitoring station
DirectConnect	Connect the downloader to the panel by a RS232 cable
Disarm	Disarm the panel from the downloader. You have to specify the area, when prompted.
Download All (w/o RF)	Download all information except the RF data
Download All (w/o User Codes)	Download all information except the user codes
Download All (w/User Codes)	Download all information, including the user codes
Download Ambush	Download ambush details
Download Auto Arming Times	Download auto arming times details
Download BA Options	Download burglary alarm details

Download Comm	Download communication details
Download Ctrl Set Options	Download control set options details
Download Device Options	Download options configured for the device
Download Group	Download group details
Download Holiday	Download holiday schedules
Download Keypad Information	Download keypad information to the panel
Download Loop / Point	Download loop and points details
Download Pass Code	Download pass code details
Download RF	This command is used only when the optional RF Expander module is installed
Download Temporary Schedule	Download temporary schedules to the panel
Download User Codes	Download only user codes to the panel
DownloadAccessData	Download access data to the panel
DownloadAlarmTypes	Download alarm type data to the panel
DownloadAll	Download all programming information to the panel
DownloadAlpha	Download panel Alpha display strings
DownloadRelay	Download relay information to the panel
DownloadSchedule	Download all schedule information to the panel
DownloadSystem	Download system information to the panel
Download TroubleTypes	Download trouble type details
ECPList	Upload ECP device details
Engineer Reset	Perform Engineer reset to control panel
EventLogAlarms	Get event log regarding alarms from panel
EventLogAll	Get event log regarding all events from panel
EventLogBypasses	Get event log regarding bypasses from panel
EventLogClear	Clear an existing event log from the panel
EventLogOpenClose	Upload event log of Open/Close details
EventLogReset	Clear all events in the control panel
EventLogSystem	Get event log regarding system events from panel
EventLogTested	Get event log of system test events
EventLogTroubles	Get event log regarding troubles from panel
EventLogUpload	Upload an event log from the panel

FireTest	Upload the fire test results from panel
Message	Send message for display on panel
PhoneLockOutOff	Prevent users from changing the Primary phone number
PhoneLockOutOn	Allows users to change the Primary phone number
PointBypass	Bypass a point
ProgrammableOutput	Turn a programmable output device ON or OFF
RelayBurglary	Report burglary to the monitoring station
RelayFire	Report incidence of fire to monitoring station
RelayOpenClose	Trigger Open/Close relay
RelayPanic	Trigger panic relay
RelayRemoteSiren	Trigger remote siren relay
Reset Swinger Count	Clear swinger count
Set Relay	Set a relay
Shutdown DialerOff	Shut down the panel dialer functionalities (suspend the Dialer operation in a panel)
Shutdown DialerOn	Restore operation of panel dialer functionalities
Shutdown SystemOff	Shutdown the system functionalities. (suspend panel operations)
Shutdown SystemOn	Restore panel operations
SilenceReset	Disarm the panel
SounderOff	Switch off the sounder
SounderOn	Switch on the sounder
Status	Get the status of the panel that is on-line with the downloader
StatusAlarms	Get the Alarms status in the panel
StatusAlarmsHistory	Get the Alarms history status in the panel
StatusBypasses	Get the Bypass Status in the panel
StatusFaults	Get the Faults status in the panel
StatusLowBattery	Get the LowBattery Status in the panel
StatusTroubles	Get the Troubles Status in the panel
StatusTroublesHistory	Get the TroublesHistory Status in the panel
TimeRead	Read the time from the panel
TimeSet	Set the time to the panel

UnBypassZone	Unbypass a zone
Upload All (w/o RF)	Upload all information other than RF details from the panel
Upload Ambush	Upload ambush details
Upload Auto Arming Times	Upload auto arming times from the panel
Upload BA Options	Upload burglary alarm details from the panel
Upload Comm	Upload communication details
Upload Ctrl Set Options	Upload control set options from the panel
Upload Device Options	Upload device options from the panel
Upload Group	Upload group details from the panel.
Upload Holiday	Upload holiday schedules from the panel.
Upload Keypad Information	Upload keypad information from the panel
Upload Loop / Point	Upload loop and point details
Upload Pass Code	Upload pass code details
Upload RF	Upload RF data. This command is used only when the optional RF Expander module is installed.
Upload Temporary Schedule	Upload temporary schedules from the panel
Upload User Codes	Upload only user codes from the panel
Upload Zone Info 1	Upload information regarding zone 1
Upload Zone Info 2	Upload information regarding zone 2
Upload Zone Info 3	Upload information regarding zone 3
Upload Zone Info 4	Upload information regarding zone 4
Upload Zone Info 5	Upload information regarding zone 5
Upload Zone Info 6	Upload information regarding zone 6
UploadAccessData	Upload access data from the panel
UploadAlarmTypes	Upload alarm type data from the panel
UploadAll	Upload all programming information from the panel
UploadAlpha	Upload panel Alpha display strings
UploadRelay	Upload only relay information from the panel
UploadSchedule	Upload schedule information from the panel
UploadSystem	Upload system information from the panel
Upload TroubleTypes	Upload trouble type details
Zone Status	Get the status of the zone. Specify the zone.