





## Front / Rear / Side View

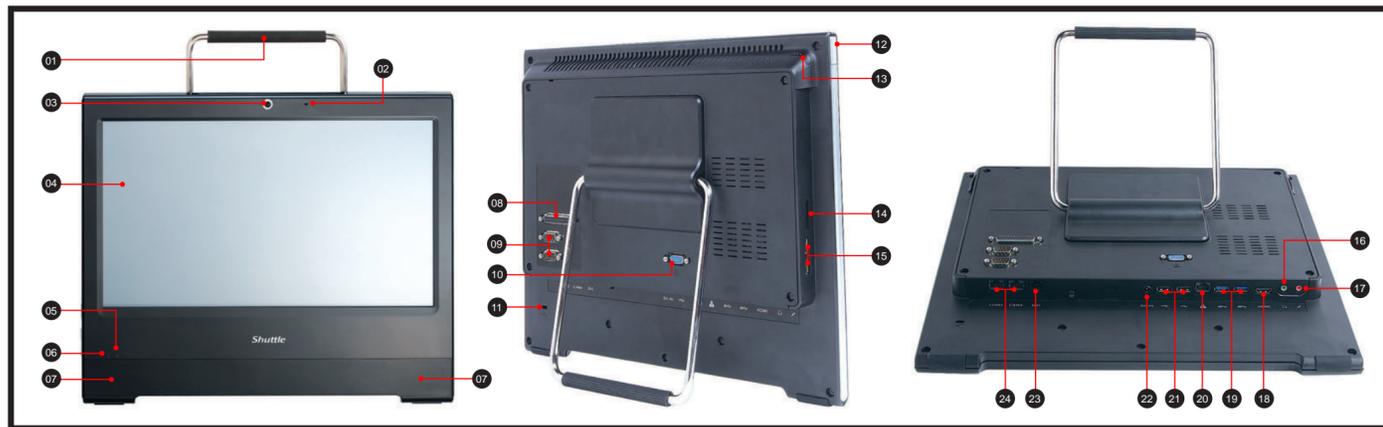

- |                               |                                   |   |
|-------------------------------|-----------------------------------|---|
| 01 Stand / Handle             | 09 COM1 and COM2 Ports (Optional) | 17 Microphone Jack                          |
| 02 Microphone                 | 10 VGA Port                       | 18 HDMI Port                                |
| 03 Webcam                     | 11 Kensington® Lock Port          | 19 USB 3.0 Ports                            |
| 04 LCD Display (Single Touch) | 12 Power Button                   | 20 LAN Port                                 |
| 05 Hard Disk Drive LED        | 13 Stylus                         | 21 USB 2.0 Ports                            |
| 06 Power LED                  | 14 SD Card Reader                 | 22 DC In                                    |
| 07 Stereo Speakers            | 15 USB 2.0 Ports                  | 23 RJ11 DIO Port for Cash Drawer (Optional) |
| 08 Printer Port (Optional)    | 16 Headphones / Line-out Jack     | 24 COM3, COM4 over RJ45 (Optional)          |


## Placing on the desk

- To place the machine on the desk and to carry it, do the following:  
Place the X50V6 on a flat surface such as a table (Picture 1), and pull the stand upwards to an angle of 30° (Picture 2). To carry or move your X50V6 fully extend the angle to 180° (Picture 3).

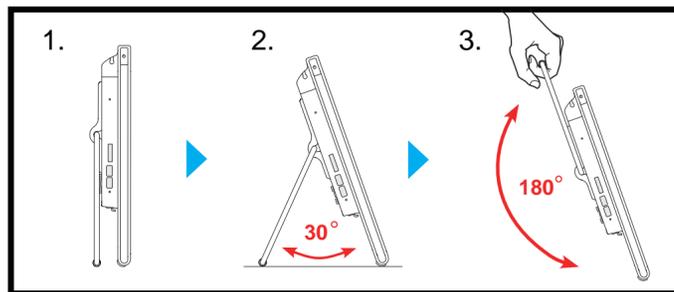

## Powering on the system

- Follow the steps (1-3) below to connect the AC adapter to the "DC-IN jack".  
Press the "Power Button" to turn on the system.

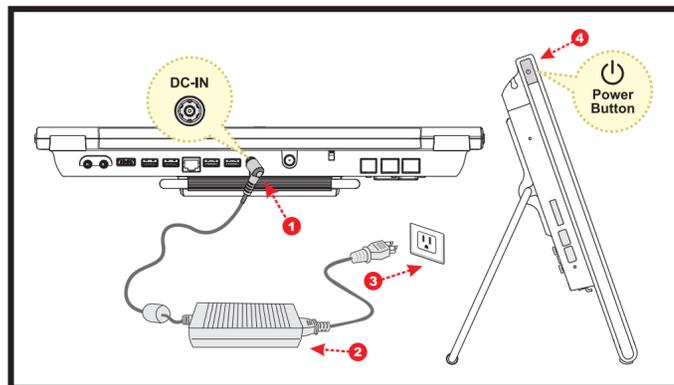


## Cleaning the screen

- Follow these guidelines for cleaning the outside and handling the screen of the computer:  
Turn off the system and disconnect all cables.  
Use a damp or cleaning cloth, ideally soft, lint-free and lightly humid to wipe the screen.


## How to use the Touch Panel

- Experience the ease of managing your digital life with a few touches by using the stylus. The touch of your finger replaces the mouse and this is all you need to interact with the X50V6.

- Touch = left-click on the mouse
- Touch and hold = right-click on the mouse

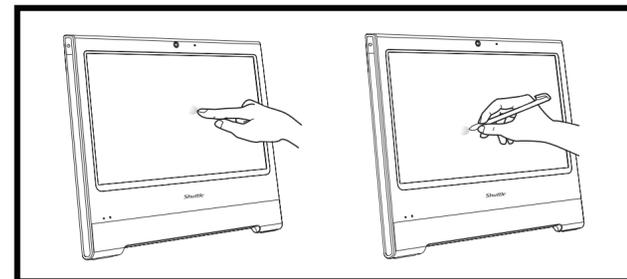


## VESA mounting it to the wall

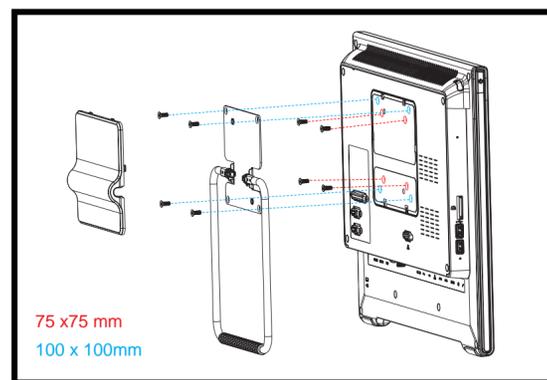

- If you are mounting your X50V6 to the wall, remove the cover on the back of the X50V6 first.  
Unscrew four screws of the stand mount and remove the stand. The VESA standard lets users mount it on to walls easily. Please refer to the user guide of the wall/arm mount kit you bought separately to install it.  
Note : The X50V6 can be mounted to a wall using a VESA compatible 75 x75 mm or 100 x 100mm wall/arm bracket.


## A. Begin Installation

- For safety reasons, please ensure that the power cord is disconnected before opening the case.
- 1. Remove the cover on the back of the X50V6 first, unscrew four screws of the stand mount and remove the stand.

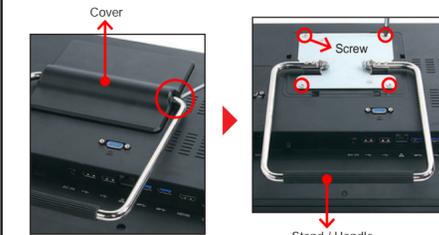

## B. HDD or SSD Installation


- 1. Unscrew four screws of the bracket and remove it.
- 2. Mount the HDD or SSD into the bracket with four screws.

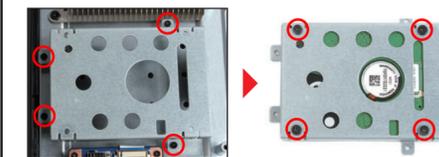

- 3. Connect the Serial ATA and power cable to the HDD or SSD.




- 4. Install the HDD or SSD & bracket in the chassis and tighten the HDD or SSD & bracket with four screws.

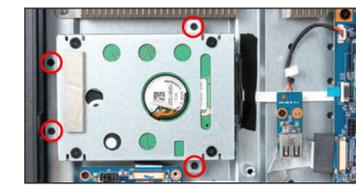

## C. Memory Module Installation


- This mainboard does only support 1.2V DDR4 memory modules.

- 1. Locate one of the two SO-DIMM slots on the mainboard.
- 2. Align the notch of the memory module with the one of the memory slot.

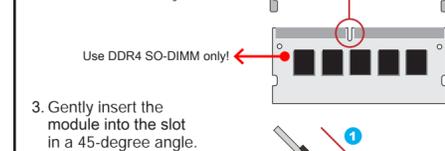

Use DDR4 SO-DIMM only!

- 3. Gently insert the module into the slot in a 45-degree angle.

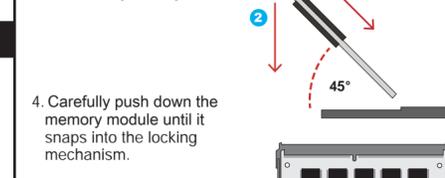

- 4. Carefully push down the memory module until it snaps into the locking mechanism.



- 5. Repeat the above steps to install additional memory modules, if required.

## D. Component Installation

- 1. As shown, unfasten the screw first.




- 2. Please install the M.2 card into the M key slot and secure with a screw.




## E. Complete

- 1. Replace the back cover.

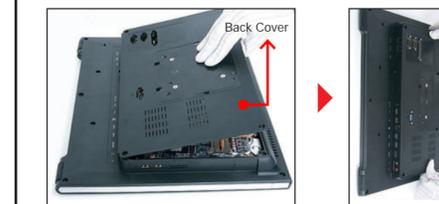

- 2. Refasten the stand and the back cover with eight screws.

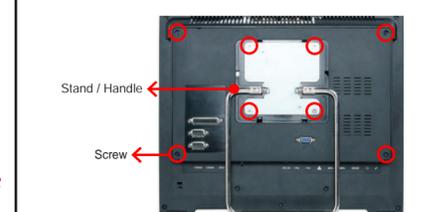


- 3. Replace the cover, complete.




## 4 Points Calibration (Installation from CD-ROM)

- Run the screen calibration program and perform a 4 points on-screen calibration.

- Click Start / All Programs / eGalax Touch / Configure Utility
- Select [Tools] tab and click [4 Points Calibration]

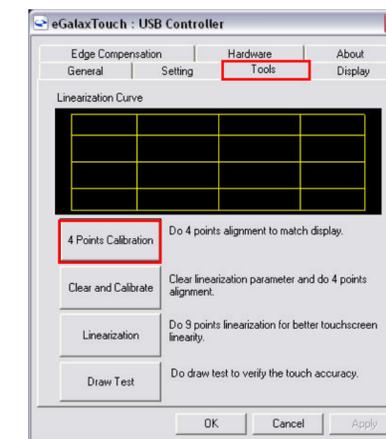

- Touch and hold the center of the target.  
Repeat on four corners and the screen will adjust automatically.

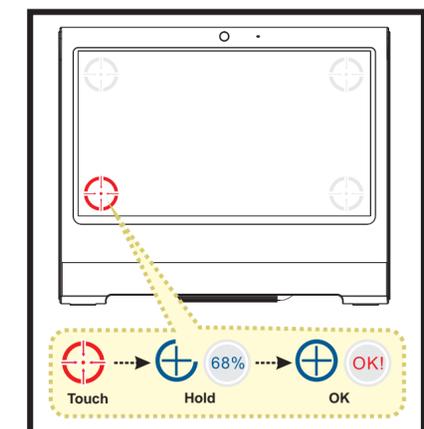

- When the 4 points calibration completed, press "OK" to continue.



## Safety Information

- Read the following precautions before setting up a Shuttle X50V6.
- CAUTION**  
Do not walk on the power cord or allow anything to rest on it.  
Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type recommended by the manufacturer.  
Dispose of used batteries according to the manufacturer's instructions.